 





User Manual

In the box

Touch MP3 Player

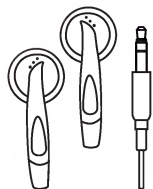

 Headphones



USB Cable

 


User Guide



CD


Location of controls

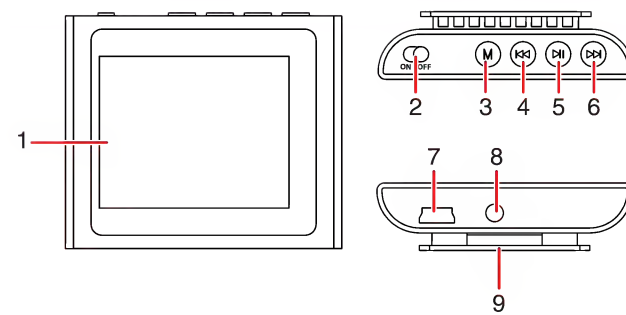

1. Touch LCD screen
2. Power on/off switch
3. [M] button: Select / Open menus / Previous menu / Main menu (press and HOLD)
4. [M] button: Previous file / Rewind (press and HOLD) / Volume down
5. [M] button: Play / Pause / Power on-off (press and HOLD)
6. [M] button: Next file / Fast Forward (press and HOLD) / Volume up
7. Mini USB port
8. Headphone jack
9. Clip

Charging

 1. Slide the [POWER] switch to the ON position. Note: The player will not charge while the [POWER] switch is in the power OFF position.
2. Connect the player to your computer using the included USB cable.
3. Charge the battery between 3-5 hours. Do not charge for more than 8 hours.
4. The battery icon in the lower right corner of the charging screen is the charging indicator. It will move while charging and remain solid green when finished charging.

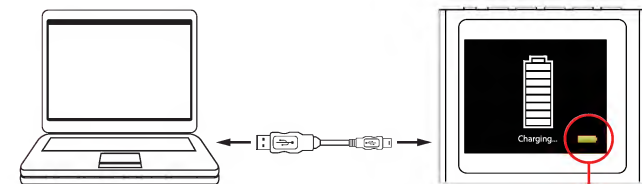

Charging Indicator

Battery level indication:

- indicates that the battery is full.
- indicates low battery; the player should be charged as soon as possible.

 
IMPORTANT: Charge the player for at least 8 hours before using it for the first time.

Basic operation

Turning on/off

Make sure the MP3 player is fully charged before turning it on.

- To turn on the player, make sure the [POWER] switch is in the "ON" position. If it is already in the "ON" position, then press and **HOLD** the [M] button until the display lights up.
- To turn off the player, press and **HOLD** the [M] button until the display shuts off or slide the [POWER] switch to the "OFF" position.

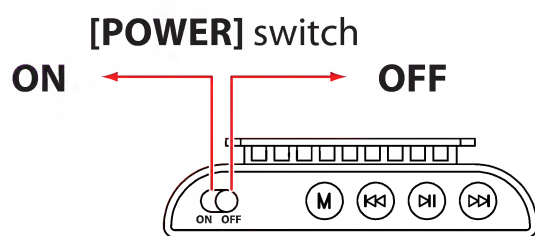


Touch screen

This player has touch screen capabilities.

1. To make a selection touch an icon or option on the screen.
2. Press the [M] button at any time to go back one screen.
3. Use the [M] and [M] icons on the screen to scroll through menu pages.

Volume menu

 1. To adjust the volume, swipe your finger up on the screen while media is open. The volume menu appear.
2. Touch the [M] icon on the screen or the [M] button on the player to lower the volume.
3. Touch the [M] icon on the screen or the [M] button on the player to raise the volume.
4. To close the volume menu swipe your finger from right to left on the screen.

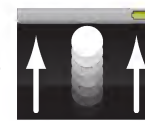

Sub menus

1. To open menus swipe your finger from left to right on the screen while media is open.
2. To make a selection touch an option on the screen
3. To close menus swipe your finger from right to left on the screen.



Main menu

 
To navigate the main menu touch an icon to select it **OR** Press the [M] button to move the selection left Press the [M] button to move the selection right Press the [M] button to confirm your selection

- music - play songs and voice memos
- video - play videos
- photos - view pictures
- record - record voice memos
- browser - browse all files
- settings - change player settings

i To return to the main menu at any time, while playing media or searching menus, press and **HOLD** the [M] button.

Transferring media files to the player


1. Find music, picture, or video files on your computer.

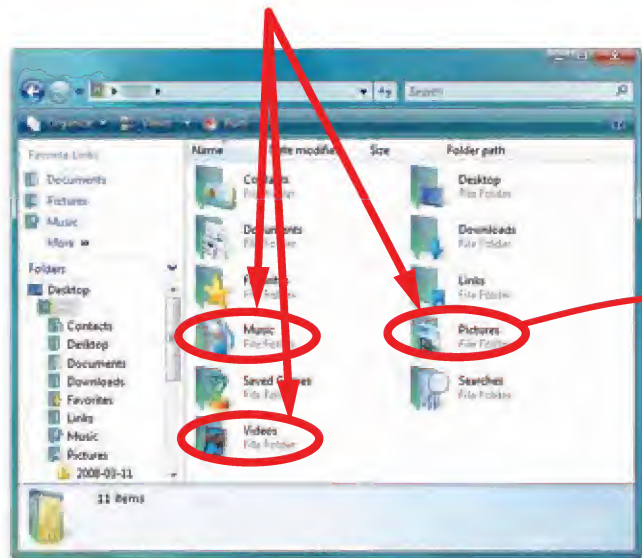

IMPORTANT: Do not disconnect the MP3 Player from the PC while transferring files as doing so will damage the MP3 Player and your files.

i It is also possible to delete files on the player while connected to the computer. Select the file and press the delete key of the computer's keyboard.

 2. Connect the MP3 Player to your computer, and locate "MP3."
3. Drag or copy the files as shown below (do not drag or copy files into the "RECORD" folder).

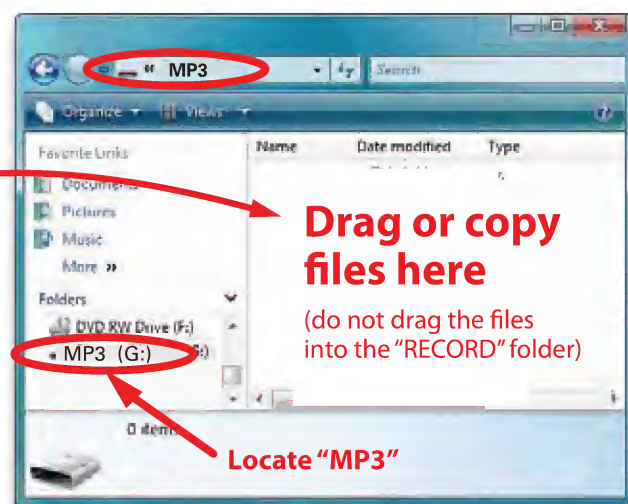

When you are done, disconnect your MP3 Player from the computer using the "Safe Device Removal" utility in the taskbar.

NOTE: Screenshots above may be slightly different than your computer's operating system.

Music

 
Music touch controls

1. To play music, touch the "music" icon on the main menu. The music playing screen will be displayed.
2. To view your list of songs swipe your finger from left to right on the screen then select "Local folder".
3. Select a track to play by touching it. The music playing screen will be displayed in pause mode.
4. To play or pause the track touch the middle of the screen.
5. To skip backward or forward, touch the [M] or [M] icon on the screen.
6. To rewind or fast forward, press and HOLD the [M] or [M] icon on the screen.

i You can make a selection by using the touch screen function or you can use the player's buttons to navigate.

Music button controls (playback screen)

1. [M] access music menus 1 and 2 / press and HOLD for main menu / confirm volume level
2. [M] previous track / rewind (press and HOLD) / decrease volume
3. [M] play music / pause music
4. [M] next track / fast forward (press and HOLD) / increase volume



Music controls (menu 1 and menu 2)

To make a selection touch an option on the screen.

- OR** press the following buttons:
- [M] confirms selection / press and **HOLD** for main menu
 - [M] moves the selection up
 - [M] return to music playback screen
 - [M] moves the selection down

Music menu 1

1. While music is **PLAYING**, swipe your finger left to right or press the [M] button to access music menu 1 where you can select from the following options:

Repeat mode – track repeat options
Equalizer – select music type
SRS WOW – adjust sound field
Exit – exit to music playback screen

2. Touch the option to select and confirm or use the [M] and [M] buttons to select and [M] to confirm your choice.

Music menu 2

1. While music is **PAUSED**, swipe your finger left to right or press the [M] button to access music menu 2 where you can select from the following options:

Local folder – browse music files on the player
Delete file? – delete a single music file
Delete all files? – delete all music files
Exit – exit to music playback mode

2. Touch the option to select and confirm or use the [M] and [M] buttons to select and [M] to confirm your choice.

